

Table Of Contents

Table Of Contents 1

A33 Wireless Weatherproof Speaker - Resetting the Unit

Reference Number: **AA-00373** Views: **37809** Last Updated: **2015-02-09 11:00**

How can the A33 be reset?

To reset the A33:

- Remove the A33 pairing (forget) on your Bluetooth source device.
- Hold the A33 power button and the AUX button down together for 5 seconds.
- The A33 will flash the volume LEDs and then reset and shut off.
- Let the unit remain off for at least 10 seconds and then turn it on.
- The unit powers on in the AUX mode. Press Bluetooth and pair the unit with your device.

Performing a reset may be useful in the following situations:

- Forget the paired Bluetooth settings on the A33
- Unit will not pair with a device
- Unit is paired but not playing
- Sound quality appears to have deteriorated

Note: iPhone, iPad, iPod Touch devices that have been previously paired with the A33 may not pair again until a "forget device" is executed on the iDevice.